


User Instructions

MOD 6

Modulift
by pewag

The Modulift Spreader is modular in length, and every spreader consists of 1 pair of End Units and Drop Links, with intermediate struts that can be bolted into the assembly to achieve different spans. The MOD 6 has an assembled span ranging from 400mm to 4.5m in 100mm increments.

Fig.1 Typical Spreader Assembly

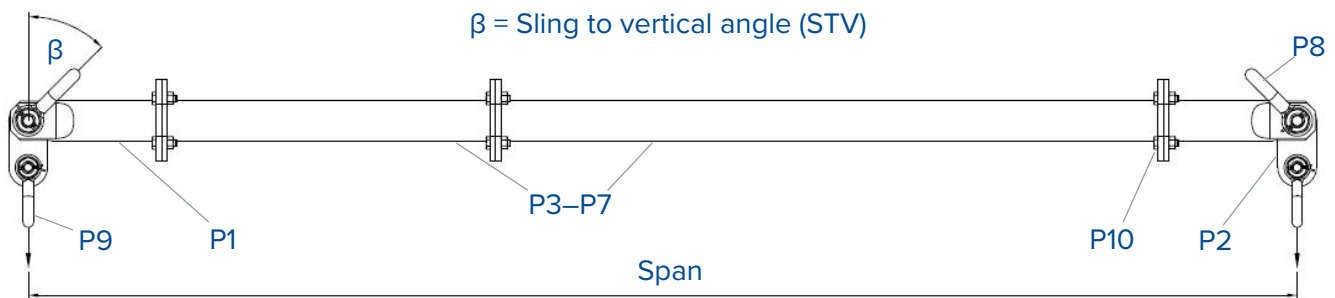

End Unit



Drop Link



Strut

Table 1 – Component List

Part Ref.	Description	Weight/item
P1	End Unit (0.2m)	3.0 kg
P2	Drop Link	0.6 kg
P3	1000mm Strut	8.1 kg
P4	600mm Strut	5.4 kg
P5	300mm Strut	3.4 kg
P6	200mm Strut	2.7 kg
P7	100mm Strut	2.0 kg
P8	4.75t pewag Shackle	1.2 kg
P9	3.25t pewag Shackle	0.8 kg
P10	M10 x 30, Grade 8.8, HT Bolts, Nuts & Washers	

MOD 6 Beam Specification

- Rated at 6 tonnes WLL at 3.6 metres span. (30° STV). See Load Table for WLL at longer spans.
- 'Sling to Vertical' angle, β, 45 degrees or less.
- End Units & Drop Links are rated at 3 tonnes WLL each (6 tonnes combined capacity).
- Bolt tightening torque: 60 Nm.** Spanner size required: 17mm.
- Recommended additional equipment: Torque Wrench, Podger Spanner and Ring Spanner.



WARNING!

- Personnel using this system should be suitably trained, competent and have a clear understanding of Safe Slings procedures, see Modulift assembly and setup procedure
- The use of Modulift equipment must be in accordance with the procedures laid down in 'Lifting Operations and Lifting Equipment Regulations 1998' (LOLER)
- Never exceed stated WLL** – Adhere to WLL in **Table 2** for particular sling angle used
- The top sling length is critical to the safe use of the spreader** – Adhere to **Table 2**
- Ensure Drop Links hang down, and smaller shackles are connected to bottom hole of Drop Link.
- Do not under any circumstances hang load(s) from the tube or flanges** – the spreader is designed for axial compression, not bending.

User Instructions

MOD 6

Modulift
by pewag

Assembly Procedure

1. Check the ID plates on each Modulift component to ensure the correct size is used.
2. Lay out the Struts and End Units in the correct configuration (see **Table 2**), laid on flats to prevent rolling.
3. Check that all pairs of flanges are clear from debris, sand etc before connection.
4. Bolt the components together using bolts, nuts and washers provided. Tighten the bolts to a torque shown overleaf, 4 bolts per connection. The number and grade of bolts is crucial for safe use of the spreader, particularly at longer spans.
5. Place drop link inside the jaw of an end unit, with the larger hole of the drop link lined up with the end unit hole.
6. Place a top sling onto the body of a top shackle, and put the jaw of top shackle over the end unit jaw.
7. Put top shackle pin through shackle, end unit jaw and drop link, and repeat for other spreader beam end.
8. Attach free ends of top slings to crane hook.
9. Attach lower slings and shackles to lower holes of drop links, and attach them to the load to be lifted.
10. The assembled spreader and lifting rig must be thoroughly checked by a competent person prior to lifting.

Do's & Don'ts

- Do ensure to load the spreader through the drop links only. i.e. adhere to **Fig. 1**.
- Do keep the loaded spreader clear of obstacles - any contact could cause beam failure.
- Do ensure correct use of appropriate top slings, do not twist any slings unnecessarily.
- Do not hang any load from the spreader tube or flanges.
- Do not exceed stated WLL for that particular span - adhere to **Table 2**.
- Do not rig lower slings more than 6 degrees from vertical.
- When moving or positioning long struts or assemblies, use tag lines to control movement.
- Individual components can be heavy and extreme care must be taken if manual handling.

Recommended Top Sling Types


Textile slings, wire rope slings with soft eyes and chain slings with small end fittings. If thimble eyes are used with wire rope slings, make sure sling angle is 60 degrees or less. Other types exist but not all are suitable due to end fitting size, particularly larger capacity chain hook and thimble eyes. **Note:** Lengthening the slings can give greater clearance. Refer to Modulift supplier if in doubt.

Table 2 – Load v Span

Span (m)	STV 45°		STV 60°		STV 70°		Recommended Configuration EU - End Unit (0.2m)						
	SWL metric tons (tonnes)	Min. top sling length (in)	SWL metric tons (tonnes)	Min. top sling length (in)	SWL metric tons (tonnes)	Min. top sling length (in)							
0.4	6	0.2	6	0.4	6	0.5	EU	EU					
0.6	6	0.4	6	0.6	6	0.8	EU	0.2	EU				
0.8	6	0.5	6	0.8	6	1.1	EU	0.3	0.1	EU			
1.0	6	0.7	6	1.0	6	1.4	EU	0.6	EU				
1.2	6	0.8	6	1.2	6	1.7	EU	0.6	0.2	EU			
1.4	6	1.0	6	1.4	6	2.0	EU	1	EU				
1.6	6	1.1	6	1.6	6	2.3	EU	1	0.2	EU			
1.8	6	1.2	6	1.8	6	2.6	EU	1	0.3	0.1	EU		
2.0	6	1.4	6	2.0	6	2.9	EU	1	0.6	EU			
2.2	6	1.5	6	2.2	6	3.2	EU	0.6	1	0.2	EU		
2.4	6	1.7	6	2.4	6	3.5	EU	1	1	EU			
2.6	6	1.8	6	2.6	6	3.8	EU	1	1	0.2	EU		
2.8	6	1.9	6	2.8	6	4.1	EU	1	1	0.3	0.1	EU	
3.0	5	2.1	6	3.0	6	4.3	EU	1	1	0.6	EU		
3.2	4	2.2	6	3.2	6	4.6	EU	1	1	0.6	0.2	EU	
3.4	4	2.4	6	3.4	6	4.9	EU	1	1	1	EU		
3.6	3	2.5	6	3.6	6	5.2	EU	1	1	1	0.2	EU	
3.8	3	2.7	5	3.8	6	5.5	EU	1	1	1	0.3	0.1	EU
4.0	3	2.8	5	4.0	6	5.8	EU	1	1	1	0.6	EU	
4.2	2	2.9	4	4.2	6	6.1	EU	1	1	1	0.6	0.2	EU
4.4	2	3.1	4	4.4	6	6.4	EU	1	1	1	1	EU	
4.5	2	3.1	4	4.5	6	6.5	EU	1	1	1	1	0.1	EU



WARNING!

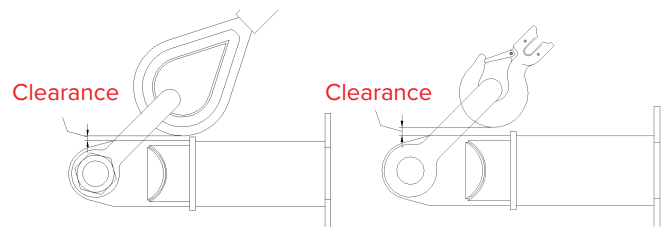

- The rigger must ensure that there is a clearance between the sling end fitting and the end unit as shown above.
- Max. number of struts allowed in spreader assembly: 5
- Assemble longer struts in the centre of the spreader configuration.
- Sling angle is crucial to safe use of spreader.

MOD 6 UK NOV 2025

© Copyright 2025 Modulift.
All rights reserved.

Should you find your equipment is no longer of use,
please dispose of in a responsible manner. Please
contact Modulift if you need further guidance

